 


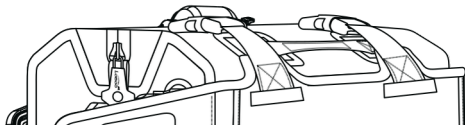

Inflatable Side Bag Instructions



Product Parameter

Model : BAB23TBK

BAB30TBK

Side Bag Material (including buckle): TPU, 840D Nylon Fabric, EVA, Nylon,
Aluminum Alloy, Silicone, Stainless Steel

Side Bag Appearance Size

(excluding buckle): BAB23TBK	Length 420mm/16.54in	Width 190mm/7.48in
	Height 420mm/16.54in	
BAB23TBK	Length 420mm/16.54in	Width 240mm/9.45in
	Height 420mm/16.54in	

Side Bag Load: Road 12kg/26.45lbs

Off Road 8kg/17.64lbs

Side Bag Inflated State Bearing Force: $\geq 300\text{KG}/661.39\text{lbs}$

Inflatable Performance Single Use Duration: ≥ 6 hours

 
Compatible with Other

Brand Side Bag Size: Length 360mm-420mm/14.17in-16.54in

Width 150mm-200mm/5.91in-7.87in

Height 380mm-440mm/14.96in-17.32in

Inflatable Side Bag

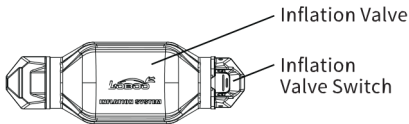

Airtight Waterproof Zipper

Zipper Anti-theft
Rope Hole Position

 
Hand-held
Woven Belt

Auxiliary
Pull Ring

Anti-theft Rope
Storage Bag

Fixing Strap

Anti-theft Rope

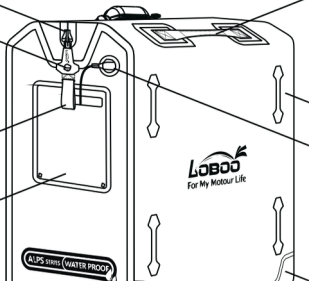

Side Bag Rack

 
Rack Fixed Buckle

Anti-theft Rope
Hole Position


Anti-theft Rope
Hole Position

Side Fixed
Buckle

Side Fixed
Buckle

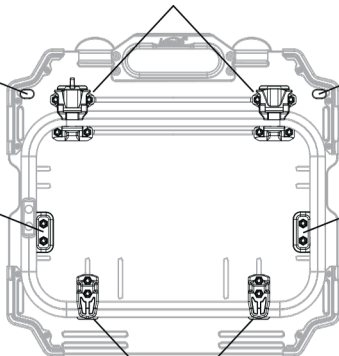


Inflation Valve

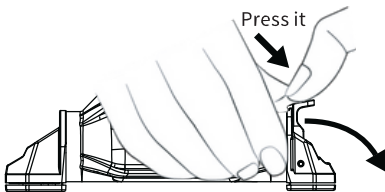 

Note: Please operate as shown in the figure. Improper operation will damage the inflation valve.



Inflation valve
switch opening illustration

 Airtight Waterproof Zipper

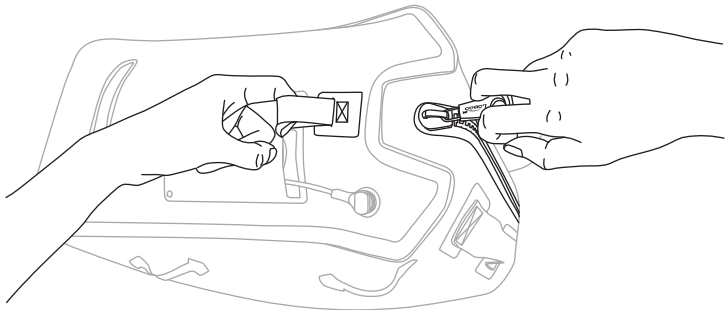


One hand's index finger + middle finger pinch the zipper head. Let the zipper and the auxiliary pull

  Lock Core

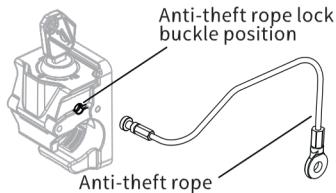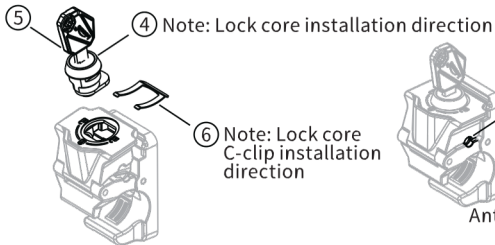


Anti-theft Rope

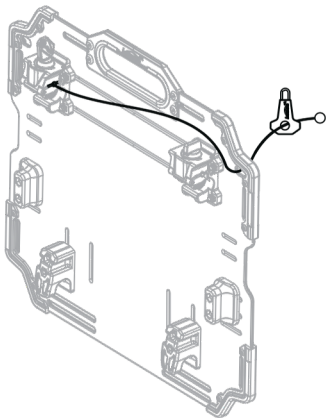 

II. the lock and lock buckle position is far


1. Pass the anti-theft rope through the hole position of the airtight waterproof zipper.
2. Pass the anti-theft rope through the hole position of the motorcycle side bag fixed plate.
3. Put the lock of the anti-theft rope into the locking groove of the anti-theft rope locking buckle (with lock core) of the top fixed buckle, and lock the lock core.

 Position can be changed according to the side rack

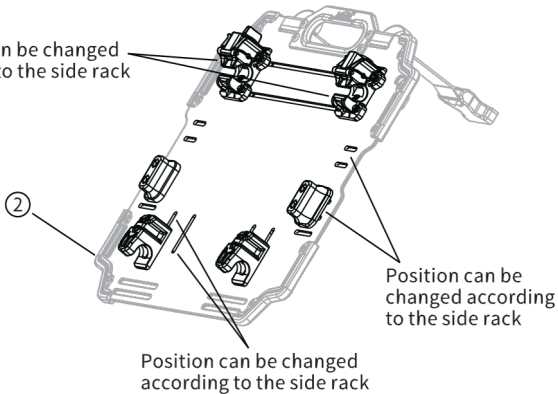


2. Pass the Velcro strap under part ③ through the lower hole of the strap hole of part ②, and pass the Velcro strap that has passed through from the upper hole of

 
3. Fix the Velcro according to the instruction label.

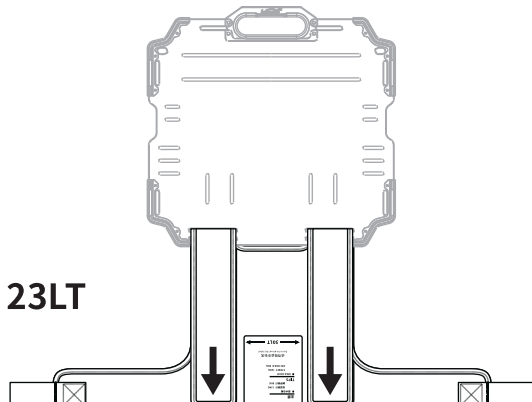

  
4. (1) Take out the fixing straps on both sides of part ③ and pass them through the holes on both sides of part ② (Figure 1).
(2) Then fold back to the channels on both sides of part ③ (Figure 2).
(3) Finally, stick the Velcro (Figure 3).

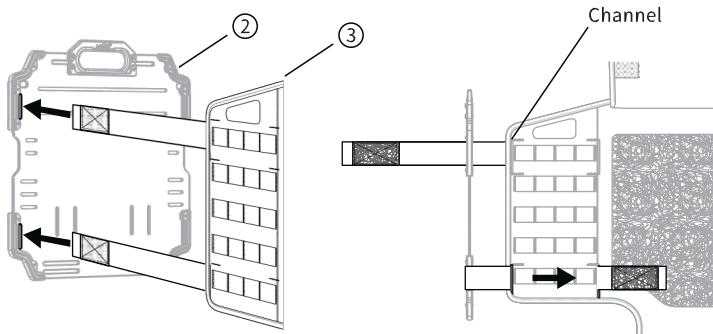



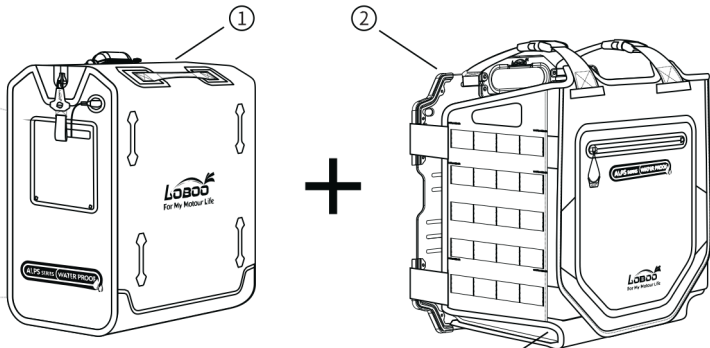

 
5. Put part ① into the motorcycle side rack kit, fasten the top fixed buckle, tighten it, then adjust the length of the strap storage belt and stick the Velcro.

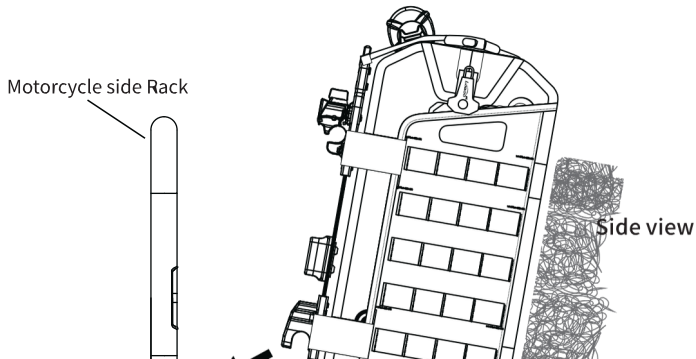


6. Fix the side bag to the motorcycle side rack, tighten and lock it. If the top fixed buckle is not locked, there is a risk that part ② will fall off, causing property loss and safety accidents.



Exhaust Side Rack Fixing Kit Parts List

⑨	Exhaust Side Rack Fixing Kit		2 pcs	Choose the exhaust side rack fixing kit according to different models (optional)
⑩	M5*16 Torx Flat Round Head Screw		8 pcs	Torque: 5N·m
⑪	M6*12 Hex Cylinder Head Screw		4 pcs	Torque: 8N·m
⑫	5mm Hex Wrench		1 pc	
⑬	Screw Glue		1 pc	All screws can be applied screw glue



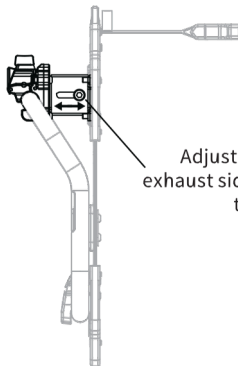 

Adjust the position of the exhaust side frame according to different models

Precautions For Use

1. When using the side bag inflation system, please tighten the zipper after loading the luggage, open the inflation valve switch, repeatedly squeeze the inflation valve (when squeezing, please continue to squeeze after the inflation valve shape recovers), inflate to the full effect, close the inflation valve switch, no need to inflate to positive pressure, can maintain a full state for more

Warranty Card



Please read this after-sales service guarantee card carefully. If you cannot accept it, please contact the dealer for return and exchange in time. Installation and use means acceptance of this after-sales service term.

After-sales Service Terms

1. One-year free warranty period, this product can enjoy free repair service within one year from the date of sale if there are quality problems under normal circumstances.
2. Limited warranty: After the one-year warranty period expires, LOBOO will provide paid warranty service, the cost is based on the actual replacement material cost, and no labor cost is charged separately.

Free warranty service does not include the following

1. No warranty card or cannot provide valid purchase proof.
2. Improper installation, use, man-made or accidental damage, self-disassembly, self-modification and repair, etc.


Return and Exchange Information

Platform ID: _____ Order Number: _____

Contact Name: _____ Contact Phone: _____



 摩托车防水安全边包说明书

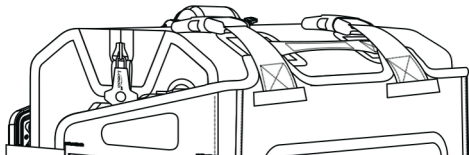

产品特性

款号: BAB23TBK

BAB30TBK

边包材质(含装载固定扣): TPU、840D尼龙面料、EVA、尼龙、铝合金、硅胶、不锈钢

边包外观尺寸(不含装载固定扣): BAB23TBK 长420mm*宽190mm*高420mm

BAB30TBK 长420mm*宽240mm*高420mm

边包承重: 铺装路面 12KG

非装路面 8KG

边包充气状态承受力: $\geq 300\text{KG}$

充气防护功能单次使用维持时间: ≥ 6 小时

兼容第三方边包尺寸: 长360mm~420mm 宽150mm~200mm

高380mm~440mm

 
兼容边架: LOBOO TIBET系列

LOBOO PIKE TRACKER系列


BMW原厂

其他接近尺寸边架, 需用户DIY相关固定孔位(边架管径需为18MM)


摩托车防水安全边包功能展示

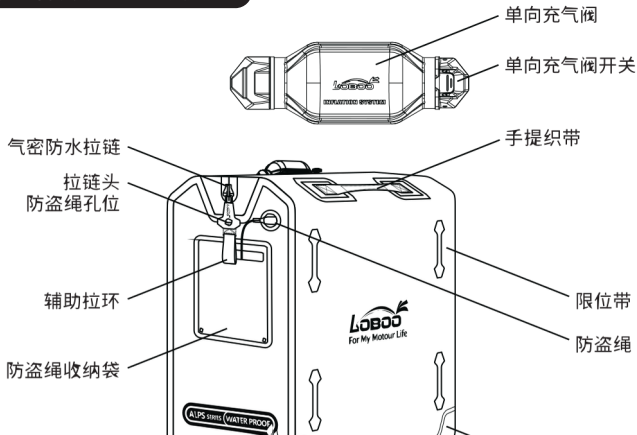

摩托车边包固定支架功能展示

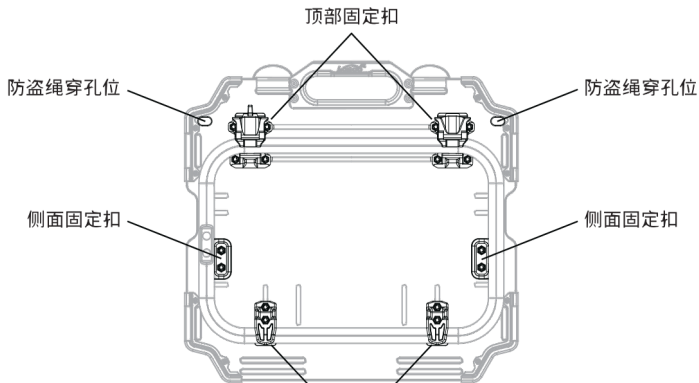 


单向充气阀使用图示

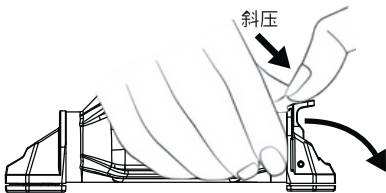 

注意：请按图示操作使用，不当操作使用，会损坏单向充气阀。



单向充气阀开关打开图示

 气密防水拉链使用图示

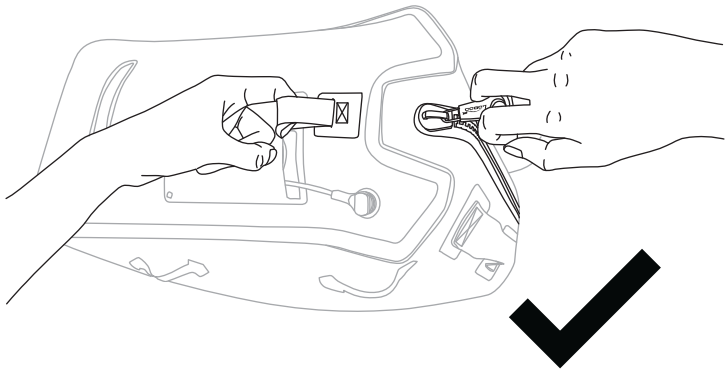


只靠食指、中指来握包住拉链头，让拉链与辅助

  锁芯安装图示

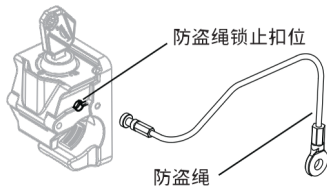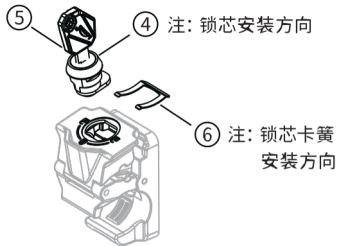


防盗绳使用图示

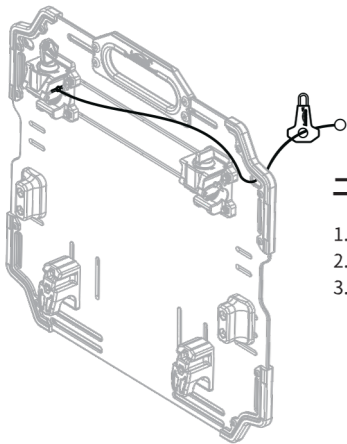 


二、锁芯锁止扣位较远

 1. 将防盗绳穿过气密防水拉链的拉链头孔位。
2. 将防盗绳穿过摩托车边包固定板孔位。
3. 将防盗绳的锁扣卡在顶部固定扣防盗绳锁止扣位(带锁芯)的锁止槽内,并将锁芯锁止。

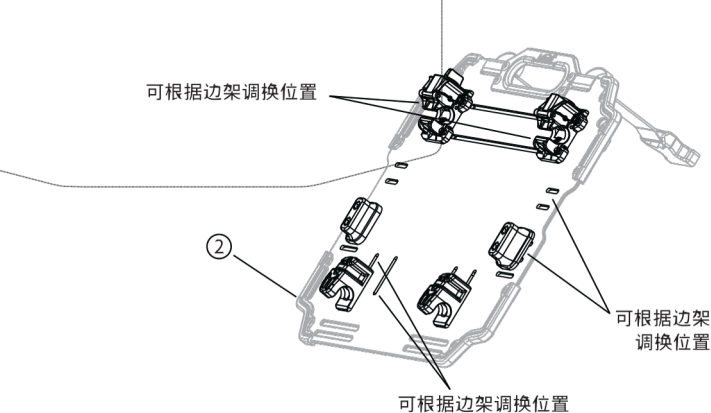


2. 将零件③下面魔术贴固定带从零件②固定带孔位的下孔位穿过, 将穿过去的魔术贴固定带从零件②固定带孔位的上孔位穿回。

 4. (1) 将零件③两侧的固定带取出, 穿过零件②两侧孔位 (图示一)。
- (2) 再折返回零件③两侧通道 (图示二)。
- (3) 最后进行魔术贴粘合 (图示三)。

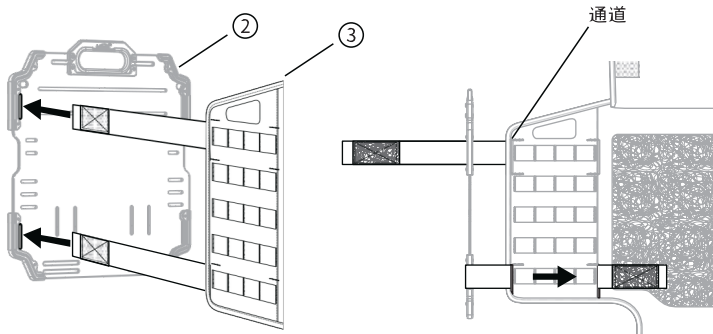


  5. 把零件①放入摩托车边包固定支架套件内,并扣好顶部固定插扣,绑紧后,调整织带收纳带长度并粘合魔术贴。

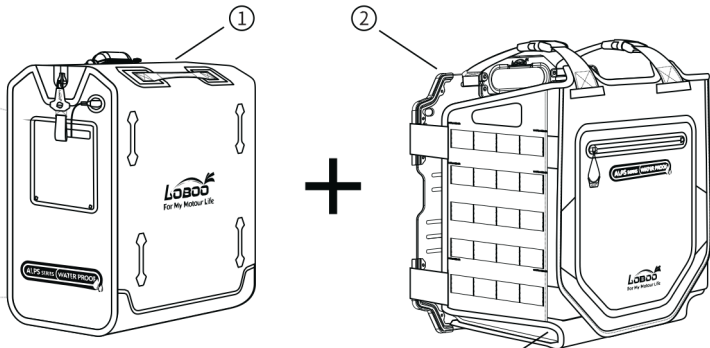



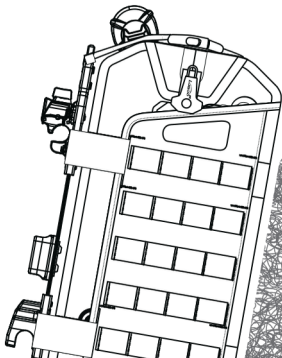


6. 把装好的边包固定到摩托车边架上扣紧并锁止,未锁止顶部固定扣有风险导致零件②脱落,造成财产损失和安全事故。

摩托车边架




侧面视图

躲排气固定支架套件配件清单

⑨	躲排气固定支架套件		2个	根据不同车型增加躲排气固定支架套件(需选配)
⑩	M5*16梅花槽平圆头螺丝		8个	扭力: 5N·m
⑪	M6*12内六角圆柱头螺丝		4个	扭力: 8N·m
⑫	5MM六角扳手		1个	
⑬	螺丝胶		1支	所有螺丝可涂螺丝胶固定



 根据不同车型的
躲排气边架调节位置

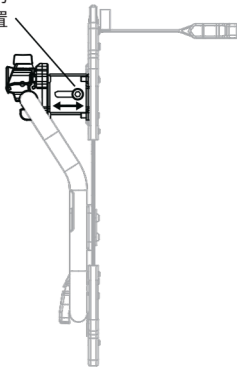

使用注意事项

售后服务保障卡



请仔细阅读本售后服务保障卡，如不能接受，请及时联系经销商退换货，安装并使用即表示接受此售后服务条款。

售后服务条款

1. 1年免费保修期，此款产品自售出之日起1年内，在正常情况下出现质量问题可享受免费维修服务。
2. 有限保修：1年保修时间到期后，LOBOO将提供有偿保修服务，费用以实际更换材料费用为准，不另收取人工费用。

免费保修服务不包括以下内容

1. 无保修卡或不能提供有效购买凭证。
2. 安装、使用不当、人为或意外损坏、自行拆解、自行改装和维修等。

退换货信息

平台ID: _____ 订单编号: _____

联系人姓名: _____ 联系人电话: _____

回家地址: _____